



DESIGNED IN AUSTRALIA

SMART LED TV

USER MANUAL



Google  android



HI-TECH
POWER SOLUTIONS

WWW.HITECHPOWERSOLUTIONS.COM.AU | PHONE: (03) 9123 8442

CONTENTS

1. Safety instructions	2
2. Accessories	4
3. Controls and connections	4
3.1 Front view	4
3.2 Rear View / Side view.....	4
3.3 Remote Control	5
4. System Connections	8
4.1 Connecting to Power Supply	8
4.2 Connecting to External AV Signal Source	8
4.3 Connecting to External Network Source (RJ45)	9
4.4 Connecting to External HDMI Signal Source	9
4.5 Connecting to Digital Audio (SPDIF)	9
4.6 Connecting to TV-Signal Input	10
4.7 Connecting to Digital Audio (Earphone)	10
4.8 Connecting to External Hard Drive (USB)	10
5. TV Operation and System Setup	11
5.1 Picture Menu	12
5.2 Sound Menu	13
5.3 Timer Menu	14
5.4 System Lock	14
5.5 Setting Menu	15
5.6 Channel Menu	16
5.7 Quick Menu	18
6. Home	19
6.1 Apps	19
6.2 Home	20
6.3 Media Operation	20
6.3.1 Photo	21
6.3.2 Music	22
6.3.3 Video	23
6.3.4 Applications	24
6.4 Setting	24
6.4.1 Network Setting	24
6.4.2 Time Setting	25
6.4.3 Common	25
6.4.4 About TV	27
7. How to Play a DVD Disc	27
8. Troubleshooting	28

1. Safety Instructions

Congratulations on your purchase!

You are now the proud owner of one of the most advanced, state-of-the-art high-definition television products available today. To ensure a smooth and easy setup, we've prepared this user manual to help you become familiar with the features and functions of your new TV. Please read this manual carefully and keep it in a safe place for future reference. Thank you for choosing our product. We appreciate your business and hope you enjoy your viewing experience!

RISK OF ELECTRIC SHOCK

DO NOT OPEN

CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK), NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



This symbol is intended to alert the user to the presence of uninsurable dangerous Voltage" within the Product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

CAUTION:

- TO PREVENT DAIMAGE WHICH MAY RESULT IN FIRE OR SHOCK HAZARD
- DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

CAUTION:

 
THESE SERVICING INSTRUCTIONS ARE USE BY QUALIFIED SERVICE PERSONNEL ONLY. TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT PERFORM ANY SERVICING OTHER THAN THAT CONTAINED IN THE OPERATING INSTRUCTION UNLESS YOU ARE QUALIFIED TO DO SO.

CAUTION:

THE STAND INTENDED FOR USE ONLY WITH THIS TV. USE WITH OTHER APPARATUS IS CAPABLE OF RESULTING IN INSTABILITY CAUSING POSSIBLE INJURY.

WARNING

- Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.
- This is Class B product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.
- To reduce the risk of fire and electric shock, do not expose this product to rain moisture.

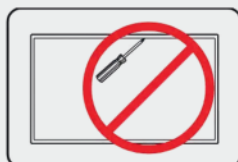

FCC NOTICE

This device has been tested and found to comply with the limits for a Class B device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in home environment as well as in a commercial, industrial or business environment. This equipment can generate, use and radiate radio frequency energy and, if not installed and used in accordance with the instruction, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by tuning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on circuit's different form that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.
- Changes or modification not expressly approved by the party for compliance could void the user's authority to operate the equipment.
- Connecting of peripherals requires the use of grounded shielded signal cables.

Important Safety Precautions

Always be careful when using your television. To reduce the risk of fire, electrical shocks, and other injuries, keep these safety precautions in mind when installing, using, and maintaining your Television.

- Read these instructions and keep them in a safe place.
- Heed all warnings,
- Follow all instructions
- Do not use this apparatus near water,
- Do not block any of the ventilation openings,
- Install it in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Do not defeat the safety purpose of the polarized or grounding type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the Television.
- Only use the attachments/accessories specified by the manufacturer. Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the Television. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- Unplug this Television during lightning storms or when unused for long periods of time
- Refer all servicing to qualified service personnel. Servicing is required when the Television has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the unit, the Television has been exposed to rain or moisture, does not operate normally, or has been dropped.
- Clean only with a lint free cloth.

2. Accessories



User's Manual



 
Remote Control



2 x AAA Battery

3. Controls and connections

3.1 FRONT VIEW

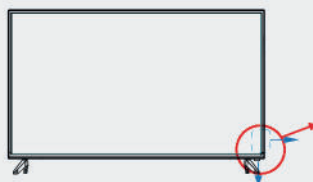

SOURCE : Display the input source list

MENU : Display the main OSD menu

CH - : Move to the lower programmer

CH+ : Move to the upper programmer

VOL - : Decrease the volume level

VOL+ : Increase the volume level

POWER : Turn the TV On or OFF

ON/OFF LED : ON - Green, OFF (Standby) - Red

3.2 REAR VIEW / SIDE VIEW



Please Note:

 
When using a USB connection with an external device, if the required current is too high, the external device may need its own power supply (e.g., an external hard drive or portable optical drive).

To transmit a digital signal to another audio device, use a standard COAX cable (do not use an AV cable). We recommend using an RG6/U shielded cable with gold-plated connectors.



- Power** : Connect the power cable to an AC outlet rated at 100 – 240V ~ 50/60 Hz.
- SPDIF input** : Digital audio output.
- L/R AV1 IN** : Connect the Left and Right Audio output of DVD or VCR (with AV/Y Pb Pr input).
- Earphone** : Connect the headphone.
- Antenna Input** : Connect external antenna to receive the ATV/DVB-T2 program in ATV/DVB-T2 mode.
- RJ45** : Connect external modem or network access equipment.
- HDMI Input** : Connect the HDMI source.
- USB** : Connecting for USB device.
- HDMI Input** : Connect the HDMI source.

3.3 REMOTE CONTROL

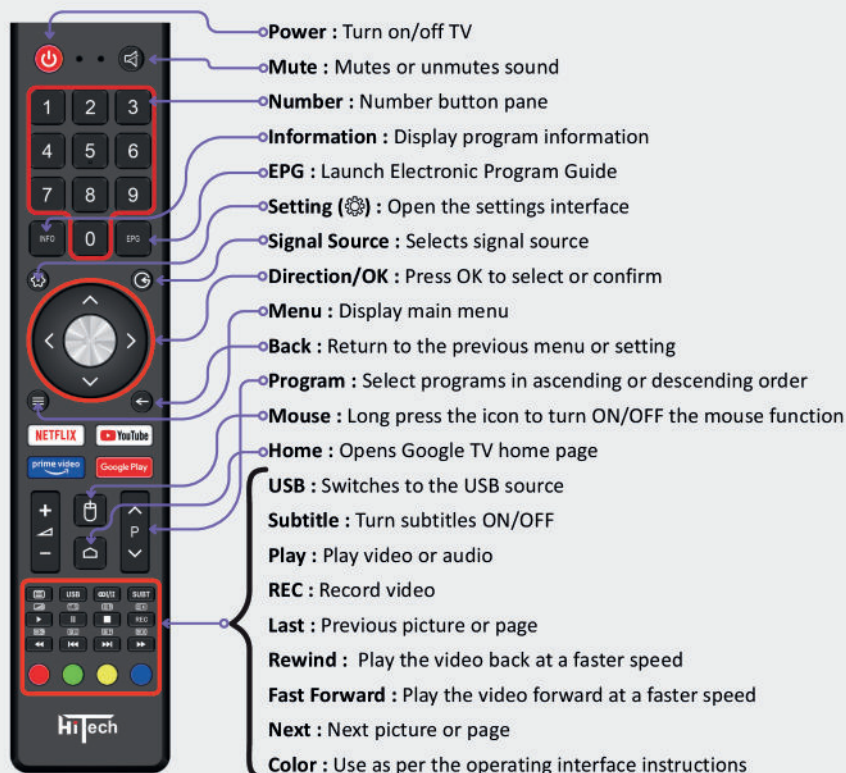

BUTTON NAME	FUNCTION	BUTTON NAME	FUNCTION
Power	Turn on/off TV	Program	Select programs in ascending or descending order
Mute	Mutes or unmutes sound	Mouse	Long press the icon to turn on the mouse function, long press again to cancel the mouse function
Number	Number button		
Information	Display program information		
EPG	Launch Electronic Program Guide		
Setting	Open the settings interface		Opens Google TV homepage
Signal Source	Selects signal source	Menu	Display main menu
Direction/OK	Press the direction buttons to select menu options or settings. Press OK to select or confirm menu item.		Switches to the USB source
		Subtitle	Turn subtitles on or off
		Play	Play video or audio
		Pause	Pause video or audio
		Stop Playback	Playback stopped
Menu	Display main menu		Record video
Exit	Return to the previous menu or setting	Last	Previous picture or page
	Opens NETFLIX app	Rewind	Play the video back at a faster speed
	Opens YouTube app	Fast forward	Play the video forward at a faster speed.
	Opens prime video app		
	Opens Google Play app	Next	Next picture or page
Volume	Adjusts volume		Use as per the operating interface instructions

PREPARATION OF REMOTE CONTROL

Place the remote control on an even surface and insert the supplied batteries into the remote control as follows, Under normal use the battery will last for six months. Take out battery when the remote is not in use for a long time

1. Softly push the back cover to open the battery compartment.



2. Insert two batteries(1.5V size AAA), please make sure the polarity matches the marks inside the compartment.




3. Softly press the back cover to close it.



OPERATION OF REMOTE CONTROL

Point the remote control unit from on more than about 7m from the remote control sensor and within about 60 degrees of the front of the unit.

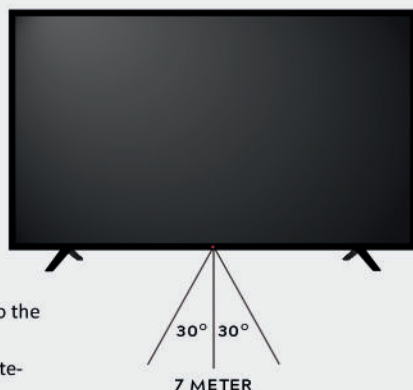

NOTE :

- The operating distance may vary depending to the brightness around.
- Do not point bright lights directly at the remote-control sensor.
- Do not place objects between the remote-control unit and the remote-control sensor.
- Do not use this remote-control unit while simultaneously operating the remote-control unit of any other equipment.

4. System Connections

Do not connect the power cord until all other connections have been made. Ensure that you observe the color cord when connecting audio and video cables.

4.1 CONNECTING TO POWER SUPPLY


- Connect the power cord correctly to the power outlet.
- Press the POWER switch of your TV to switch ON. The power indicator on the front panel lights up in Green.

4.2 CONNECTION TO EXTERNAL AV SIGNAL SOURCE

Use the audio and video cable to connect the input jacks on the rear panel of the unit to the external AV signal source.

Connect the unit and the external AV signal source to the respective jacks with the S-Video cable.

Ensure that you observe the color cord when connecting audio and video cables.

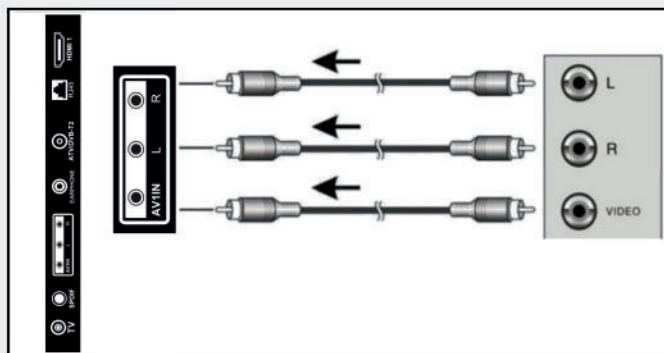

After connection, turn on the power of the unit and the external AV signal source. Press **SOURCE** then direction buttons to select AV mode, and then press the **ENTER** button to confirm.

NOTE :

- The L/R Audio input jacks can be used in the both composite modes.

4.3 CONNECTING TO EXTERNAL NETWORK SOURCE (RJ45)

The RJ45 input jack(Ethernet jack) on the rear panel of the device allows for wired network connectivity. Use a standard Cat5e/Cat6 cable to link the RJ45 port on the unit to your router, modem, or switch.

Avoid bending the cable sharply to prevent signal degradation.



RJ45 PLUG FOR CONNECTING TO EXTERNAL MODEM OR NETWORK ACCESS EQUIPMENT.

4.4 CONNECTING TO EXTERNAL HDMI SIGNAL SOURCE

Follow the figure below to connect an HDMI signal source to the HDMI jack on the rear panel of the unit.



HDMI Input

After connection, turn on the power of the unit and the external AV signal source and use the SOURCE and the DIRECTION buttons to select HDMI mode, and then press the ENTER button to confirm.

HDMI provides both audio and video signals and typically provides superior image quality to component or composite.

4.5 CONNECTING TO DIGITAL AUDIO (SPDIF)

The SPDIF port on the rear panel of the unit enables high-quality digital audio transmission. Use an optical or coaxial cable to link the SPDIF OUT port on your audio source (e.g., Blu-ray player, game console) to the SPDIF IN port on the unit.




DIGITAL AUDIO OUTPUT

After connection, Access the unit's audio menu and select "SPDIF" or "Digital Audio In" as the input source. Choose the appropriate format (e.g., PCM, Dolby Digital, DTS) based on your source device's capabilities.


4.6 CONNECTING TO TV SIGNAL INPUT

Connect the TV signal cable (the antenna cable, for example) to the antenna input jack on the back of the unit so that you can receive television programmes.

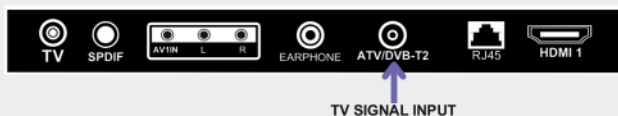

4.6 CONNECTING TO DIGITAL AUDIO (EARPHONE)

Insert the plug of your earphones firmly into the jack until it clicks into place. Ensure the plug is fully inserted for optimal audio quality.

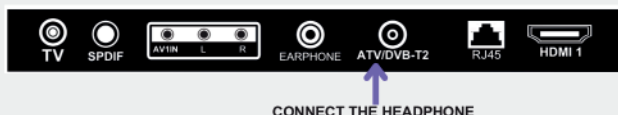

After connection, adjust volume using either: The unit's volume button or Your earphone's inline controls (if available)

4.6 CONNECTING TO EXTERNAL HARD DRIVE (USB)

Insert your USB flash drive or external hard drive directly into the port. For USB cables, ensure the standard Type-A connector is properly aligned before insertin.



THESE PORTS CAN ONLY BE USED FOR
SMART MODULE FUNCTIONALITIES.

The TV will automatically detect compatible media files. Navigate to the "Media" or "USB" input source using your remote control.

 
5. TV Operation and System Setup

SELECT INPUT SOURCE

Press **SOURCE** button to display the input source input list;


Press **▲/▼** button to select the input source you want to watch;

Press **ENTER** button to enter the input source;



After entering the source

 - Press **▲/▼** button to select the MENU you want;
- Press **ENTER** button to enter the sub menu, and press **EXIT** button to return back to the previous menu.

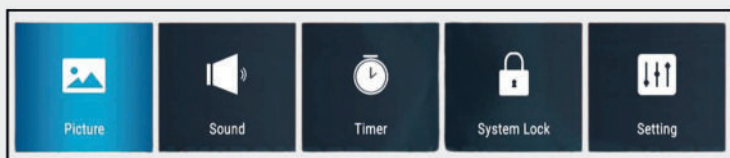

Press **INFO** button on the remote control to display program information.

1. Current program Number.
2. The NICAM mode of current program.
3. The sound system of current channel could be changed on **Analog Manual Search** Menu.

 


5.1 PICTURE MENU

Press **TV MENU** button to display the main menu.

Press **▲/▼** button to select **PICTURE** in the main menu, and then press **ENTER** button to enter

1. Press **▲/▼** button to select the option that you want to adjust in the Picture menu, and then press **ENTER** button or **►** button to enter.
2. Press **◀/▶** button to adjust or press **▲/▼** button to select. And press **ENTER** button to select the sub menu.
3. After finishing your adjustment, press **MENU** button to save and return back to the previous menu, and press **EXIT** button to exit the entire menu.

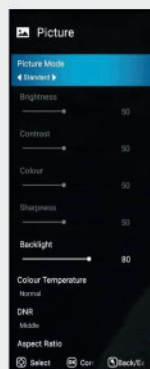


Note: The picture is for a reference only; the actual item is the standard.

5.1.1 Picture Mode

Press **▲/▼** button to select **Picture Mode**, then press **ENTER** button to enter and press **◀/▶** button to select. (Available Picture Mode: User , Standard, Dynamic,Mild)

You only can change the value of brightness, contrast, sharpness, color, when the picture is in User mode.

 TIPS: You can press **◀/▶** button on the remoter control again and again to change the picture mode directly.



5.1.2 Balance

Press **▲/▼** button to select **Backlight**, press **◀/▶** button to adjust. Then press **MENU** button to return back the previous menu directly.

5.1.3 Colour Temperature

Press **▲/▼** button to select **Colour Temperature**, then press **ENTER** button to enter and **◀/▶** button to select Standard, Cool, Warm.

5.1.4 Transparent

Press **▲/▼** button to select **Transparent**, then press **ENTER** button to enter and press **◀/▶** button to adjust. Then press **MENU** button to return back the previous menu directly.

5.1.5 DNR

Press **▲/▼** button to select **DNR**, and then press **ENTER** button to enter and **◀/▶** button to select Off, Low, Middle, High.

5.1.6 Aspect Ratio

 
Press **▲/▼** button to select **Aspect Ratio**, then press **ENTER** button to enter and press **◀/▶** button to adjust. Then press **MENU** button to return back the previous menu directly.

5.2 SOUND MENU

Press **TV MENU** button to display the main menu.

Press **▲/▼** button to select **SOUND** in the main menu, and then press **ENTER** button to enter

1. Press **▲/▼** button to select the option that you want to adjust in the Sound menu, and then press **ENTER** button or **►** button to enter.
2. Press **◀/▶** button to adjust or press **▲/▼** button to select. And press **ENTER** button to select the sub menu.
3. After finishing your adjustment, press **MENU** button to save and return back to the previous menu, and press **EXIT** button to exit the entire menu.




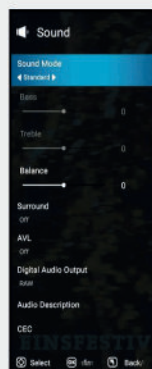


Note: The picture is for a reference only; the actual item is the standard.

5.2.1 Sound mode

Press **▲/▼** button to select **Sound mode**, and then press **ENTER** button to enter. And then press **◀/▶** button to select. (Available Sound mode: User, Standard, Music, cinema). You can change the value of bass and treble, Balance and EQ, when the sound is in User mode.

    TIPS: You can press **S-MODE** button on the remote control to change the Sound Mode directly.



5.2.2 Balance

Press **▲/▼** button to select **Balance**, then press **ENTER** button to enter and press **◀/▶** button to adjust. Then press **MENU** button to return back the previous menu directly.

5.2.3 Surround

Press **▲/▼** button to select surround, then press **ENTER** button to enter and press **◀/▶** button to adjust. Then press **MENU** button to return back the previous menu directly.

5.2.4 AVL

Press **▲/▼** button to select **AVL**, then press **ENTER** button to enter and press **◀/▶** button to adjust. It can only be adjusted under user mode. Then press **MENU** button to return back the previous menu directly.

5.2.5 Digital Audio output

Press **▲/▼** button to select **SPDIF Output**, then press **ENTER** button to enter and press **◀/▶** button to select.

(Available SPDIF mode: RAW, PCM, OFF)

Then press **ENTER** button or **►** button to enter and press **◀/▶** button to adjust, then press **MENU** button to return back the previous menu directly.

5.2.6 Audio Description

Press **▲/▼** button to select **AVL**, then press **ENTER** button to enter. You can press **◀/▶** button to open audio description, then you can press **◀/▶** button to adjust Mixing Level.

5.2.6 CEC

5.2.6.1 HDMI CEC Setup

5.2.6.2 Device Auto Power Off

5.2.6.3 TV Auto Power On

5.2.6.4 CEC device List

5.2.6.5 Amplifier Support ARC

5.2.6.6 Speaker Preference

Press **▲/▼** button to select **CEC**, then press **ENTER** button to enter and press **◀/▶** button to adjust. Then press **MENU** button to return back the previous menu directly.

5.3 Timer Menu

5.3.1 OSD Timer

5.3.2 Sleep Timer

5.3.3 Auto Power Down

Press **▲/▼** button to select **Timer**, then press **ENTER** button to enter and press **◀/▶** button to adjust. Then press **MENU** button to return back the previous menu directly.

5.4 System lock

 
5.4.1 System Lock

5.4.2 Source Lock



5.4.3 Channel Lock

5.4.4 Program Restrictions


5.4.5 Change PIN

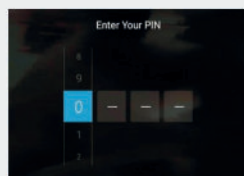

  Press **▲/▼** button to select **System Lock**, then press **ENTER** button to enter and press **◀/▶** button to adjust. Then press **MENU** button to return back the previous menu directly.

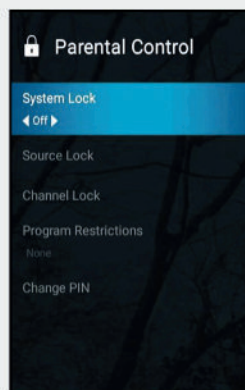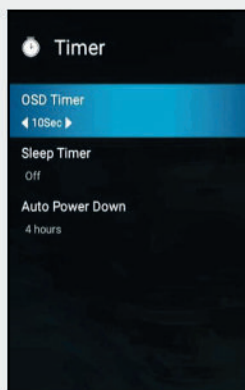

 5.5 SETTING MENU

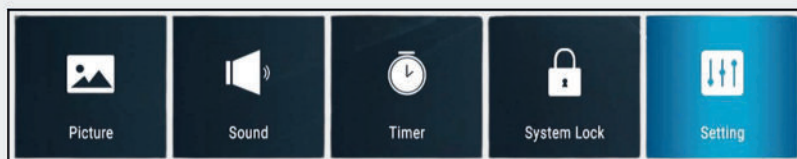

The picture is for a reference only; the actual item is the standard.

Press **MENU** button to display the main menu.

Press **▲/▼** button to select **SETTING** in the main menu, and then press **ENTER** button to enter.

1. Press **▲/▼** button to select the option that you want to adjust in the **SETTING** menu, and then press **ENTER** button to enter.
2. Press **◀/▶** button to select and press **ENTER** button to select the sub menu.
3. After finishing your adjustment, press **MENU** button to save and return back to the previous menu, or press **EXIT** button to exit the entire menu.

5.5.1 Teletext Language

Press **▲/▼** button to select **Teletext Language**, and then press **◀/▶** to select teletext language

5.5.2 Location

 
Press **▲/▼** button to select **Location**, and then press **◀/▶** to select.

5.5.3 Power Default Source

Press **▲/▼** button to select **Power Default Source**, and then press **◀/▶** to select On or Off.

5.5.4 Reset TV

Press **▲/▼** button to select **Reset TV**, and then press **ENTER** button to enter

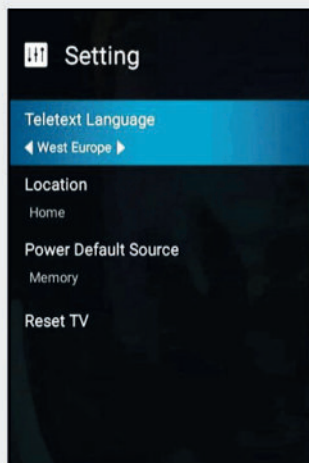


5.6 CHANNEL MENU

The picture is for a reference only; the actual item is the standard.

Press **MENU** button to display the main menu.

 
Press **▲/▼** button to select setup in the main menu, then press **ENTER** to enter.

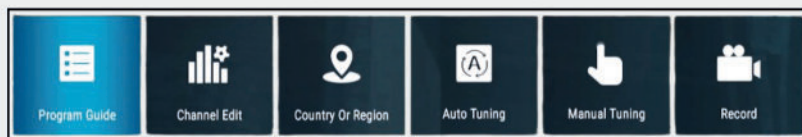

1. Press **▲/▼** button to select the option that you want to adjust in the **Channel** menu, then press **ENTER** or **▶** button to enter.
2. Press **◀/▶** button to adjust or press **▲/▼** button to select.
3. After finishing your adjustment, press **MENU** button to save and return back to the previous menu and press **EXIT** button to exit the entire menu


5.6.1 Program Guide

 1. In the DTV source, you can start channel information function by pressing **Program Guide** button on the remote control. The prompt window will appear as follows:

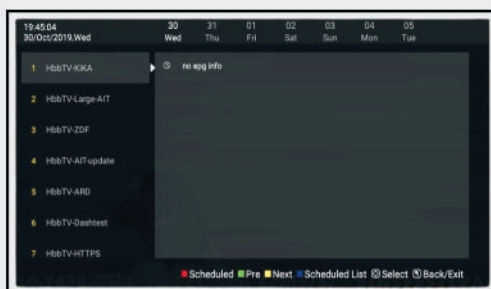


5.6.2 Channel Edit

 - Press **◀/▶** button to select **Channel Edit**, and then press **ENTER** button to play the channel selected. The menu will appear as follows:

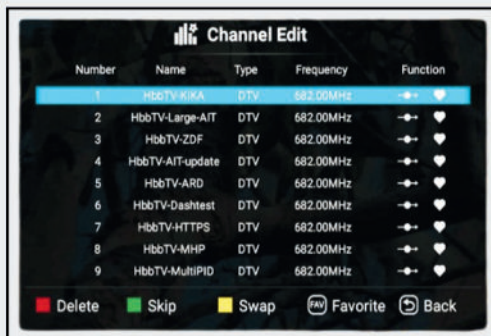


5.6.3 Country or Region

 Press ◀/▶ button to select **Channel Edit**, and then press **ENTER** button to the country or region selected. The menu will appear as follows:

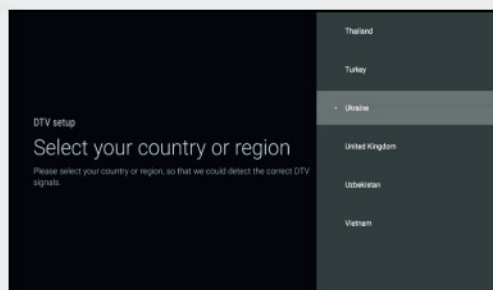


5.6.4 Auto Tuning

 Press ◀/▶ button to select **Auto Search**, and then press **ENTER** button to enter. Select OK to search. The menu will appear as follows:

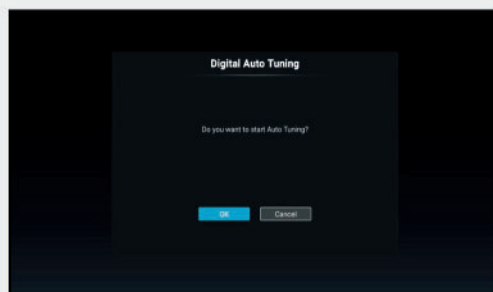


5.6.5 Manual Tuning

 Press ◀/▶ button to select **Manual Tuning**, and then press **ENTER** button to enter. Select Start Scan to search. The menu will appear as follows:

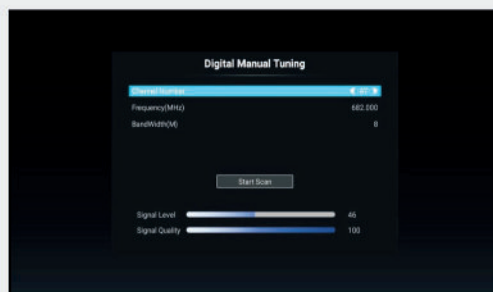


5.6.6 Record Menu

 Press ◀/▶ button to select **Record menu**, and then press **ENTER** button to Submenu selected. The menu will appear as follows:

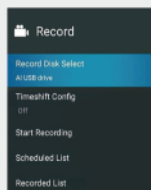


5.6.7 Subtitle Language

 Press ◀/▶ button to select **Subtitle Language**, and then press **ENTER** button to the subtitle language selected. The menu will appear as follows:

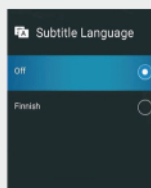


5.6.8 Multi Audio

 Press ◀/▶ button to select **Multi Audio**, and then press **ENTER** button to selected. The menu will appear as follows:

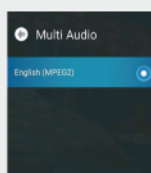


5.6.9 DTV Setting

 Press ◀/▶ button to select **DTV Setting**, and then press **ENTER** button to selected. The menu will appear as follows:

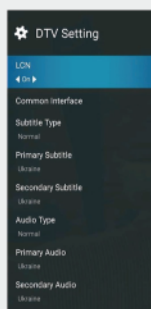

5.7 QUICK MENU

 1. Press ▲/▼ button to select the option that you want to adjust in the **Quick Menu**, then press **ENTER** or ▶ button to enter.
2. Press ◀/▶ button to adjust or press ▲/▼ button to select.
3. After finishing your adjustment, press **MENU** button to save and return back to the previous menu and press **EXIT** button to exit the entire menu.

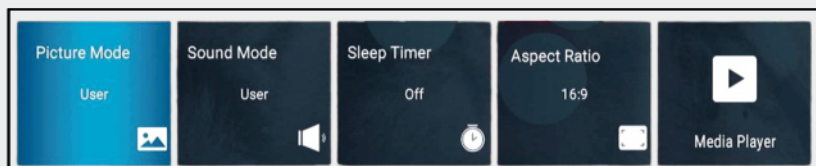


6. Home


6.1 Apps

The picture is for a reference only; the actual item is the standard.

 Press ▲/▼ button to select **Apps** in the **Source Menu**, and then press **ENTER** or **►** to enter.

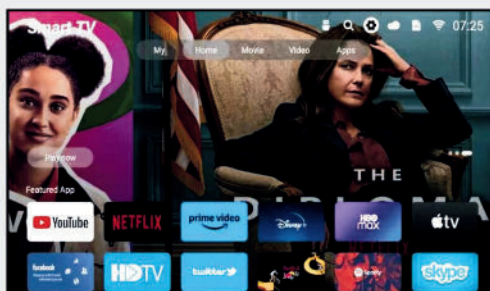

 You can use **Google Play** button to select **App Store** to download apps what you want, As the figure shows.

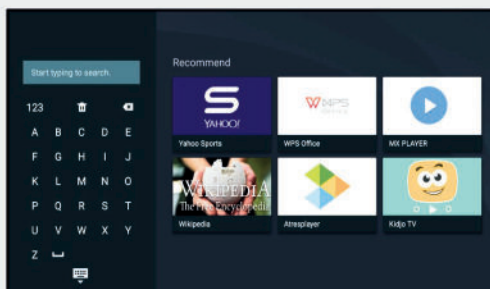


You can also select **Browser** to search the internet, As the figure shows.



6.2 Home

The picture is for a reference only; the actual item is the standard.

 Press ▲/▼ button to select **TV** in the **MY APPS** Menu, and then press **ENTER** or ► to enter.

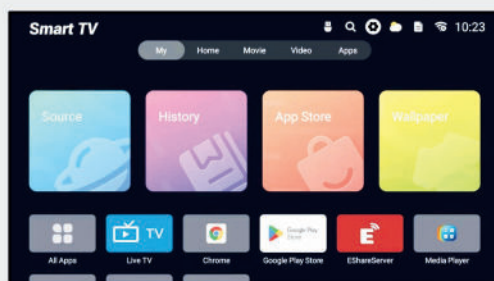


6.3 Media Operation

The picture is for a reference only; the actual item is the standard.

Note: Before operation **MEDIA** menu, Plug in USB device or memory card, then press **SOURCE** button to set the Source to Media.

 Press ▲/▼ button to select **MEDIA Player** in the **MY APPS**, and then press **ENTER** to enter.
You can also enter the **Media Player** by pressing **MEDIA** button on the remote control.

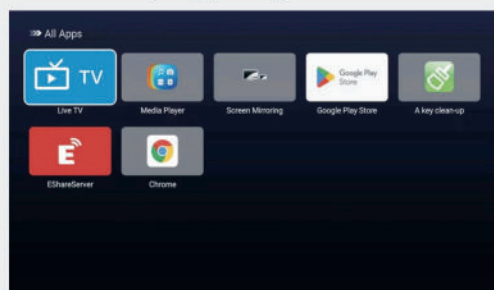


6.3.1 Photo

The picture is for a reference only; the actual item is the standard.

Press ◀/▶ button to select **Photos** in the main menu, and then press **ENTER** button to enter.

 Press **EXIT** button to return back to the previous menu.

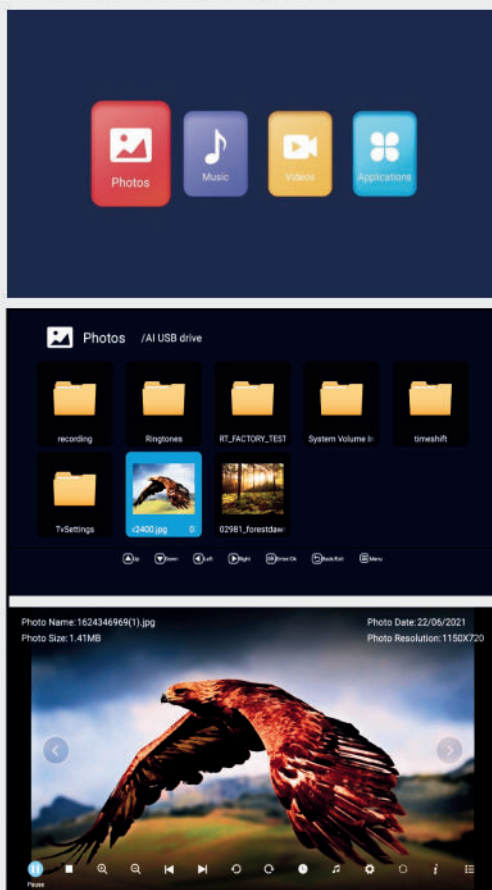

You can see the information of the current playing photo after press **INFO** button, then press

▶ || button to play or pause, you can see the playing state in the right.

Then press ▲/▼ or ◀/▶ button to rotate the picture.

 
Notes: Other menu and description are the same as that for Movie menu.

6.3.2 Music

The picture is for a reference only; the actual item is the standard.

Press ◀/▶ button to select **Music** in the main menu, and then press **ENTER** button to enter.

Press **EXIT** button to return back to the previous menu.

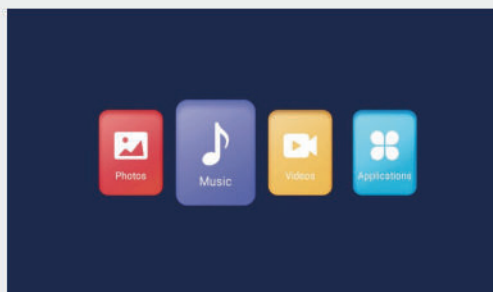

Press ▲/▼ button or ◀/▶ button to select the folder that you want to music.

 
Press **ENTER** button to select the sub folder.



You can see the information of the current playing photo after press **INFO** button, then press ▶ button to play or pause, you can see the playing state in the right.

Then press ▲/▼ or ◀/▶ button to rotate the music.

At the left of the menu.

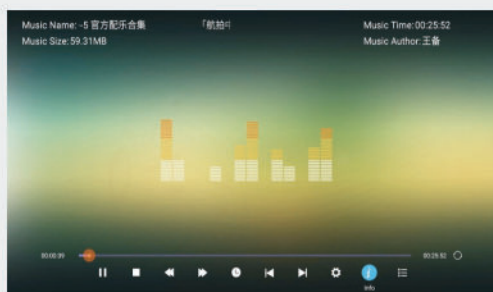


6.3.3 Video

The picture is for a reference only; the actual item is the standard.


Press ◀/▶ button to select **Video** in the main menu, then press **ENTER** button to enter.

 Press **EXIT** button to return back to the previous menu.

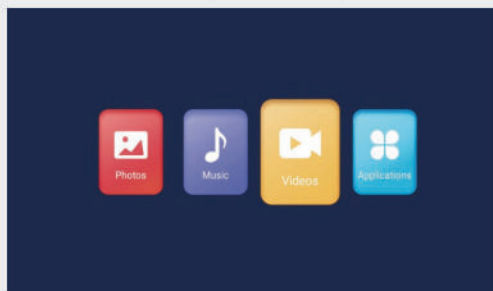

Press ▲/▼ button or ◀/▶ button to select the folder that you want to view.

 Press **ENTER** button to select the sub folder.

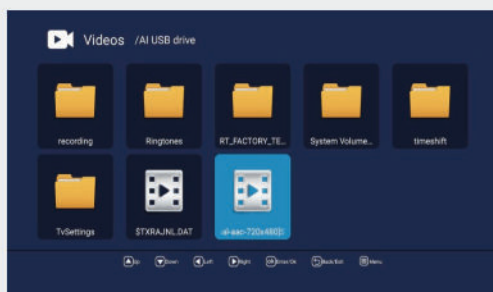

Press **ENTER** button or ▶ || button to play. Press ■ button or **EXIT** button to stop playing.

Press the ◀ button to return back to previous page.

 
You can see the information of the current playing media at the first few second or after press **INFO** button.

6.3.4 Applications

The picture is for a reference only; the actual item is the standard.

Press ◀/▶ button to select **Applications** in the main menu, then press **ENTER** button to enter.


Press **EXIT** button to return back to the previous menu.

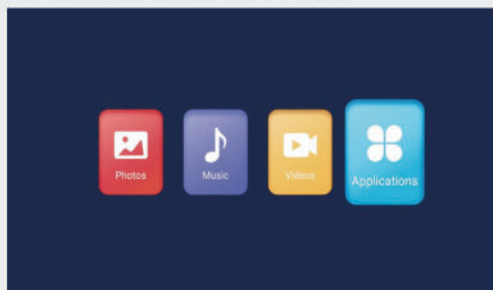

6.4 Setting

The picture is for a reference only; the actual item is the standard.

 Press ▲/▼ button to select **Setting** in the **Source Menu**, and then press **ENTER** or ▶ to enter.




6.4.1 Network Setting


The picture is for a reference only; the actual item is the standard.

Press ◀/▶ button to select **Network Setting** in the main menu, then press **ENTER** button to enter.

 Press **EXIT** button to return back to the previous menu.

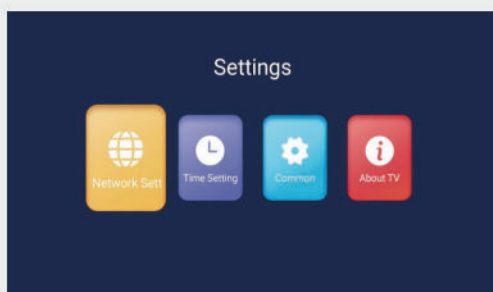


 Press ▲/▼button to select the **Network Setting** that you can open the Wi-Fi.
As the figure shows.

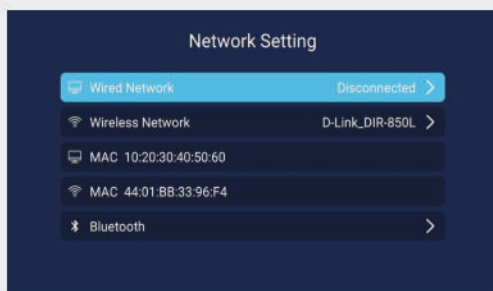


6.4.2 Time Setting

 Press ▲/▼button to select the **Time Setting** that you can open the Wi-Fi.
As the figure shows.

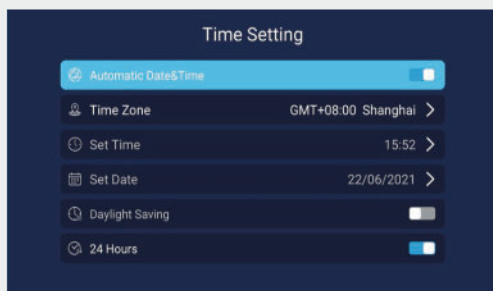


6.4.3 Common


 
Press ▲/▼button to select the **Common** that you can open the Wi-Fi.
As the figure shows.

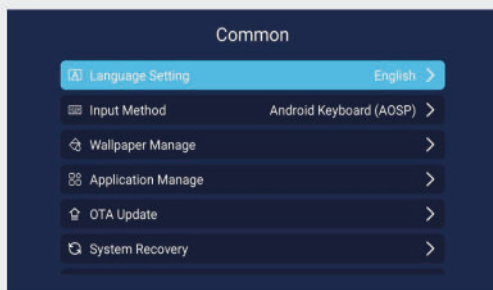

 
Press ◀/▶ button to select the **Language Setting** that you want.
As the figure shows.

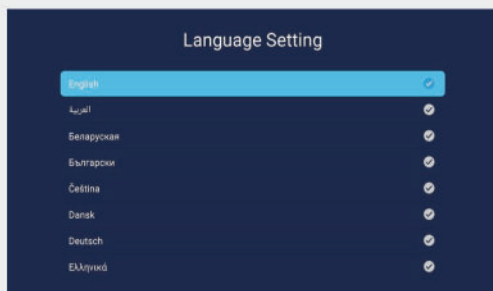

  Press ◀/▶ button to select **Application Manage** that you can know how many apps you have downloaded and this feature you also can unload the app.
As the figure shows.

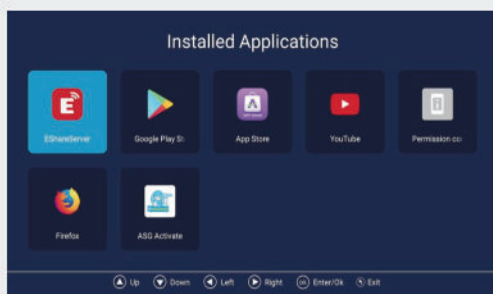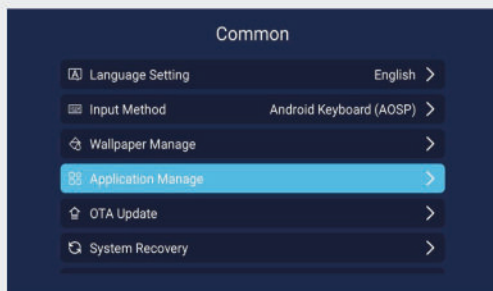


 Press ◀/▶ button to select **System Recovery** that you can reset the system.
As the figure shows.

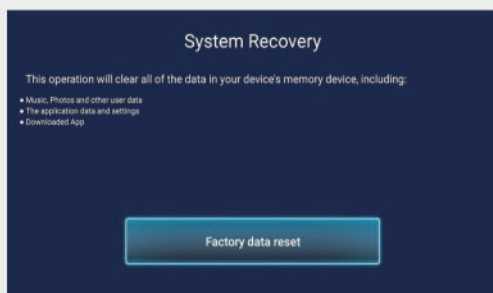

6.4.3 About TV

 
Press ◀/▶ button to select the **About TV** that you can find the information about TV.
As the figure shows.

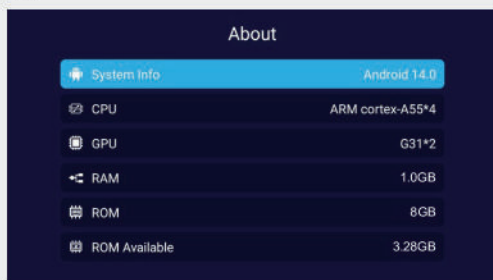

7. How to Play a DVD Disc



 1. Insert the disc into the TV's DVD port
2. Press the signal source on the remote control to enter the selection page
3. Click to enter the DVD page and play the disc

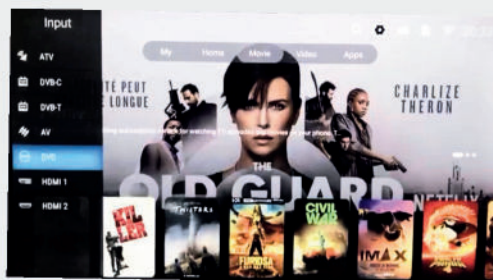


8. Troubleshooting

Carry out the problem-solving measures described in the following section before contacting customer support. Turn off the device immediately as soon as you suspect a malfunction and unplug the power plug. Do not attempt to repair the device yourself.

ISSUE	POSSIBLE CAUSE
LCD Screen stays dark	<ul style="list-style-type: none"> • Make sure the unit is turned on and the connections are correct. • Make sure the power adapter is correctly connected.
There is no sound	<ul style="list-style-type: none"> • Make sure the system connection is correct. • Make sure the power of speaker is turned on.
There is no picture or picture move up and down unsteady.	<ul style="list-style-type: none"> • Check if the connections with the external AV signal source are correct • Correctly set the items in the picture menu. • Check if the video type input signal is not corresponding to the unit • Make sure the unit is turned on and in correct video type
The remote control does not work.	<ul style="list-style-type: none"> • Make sure there are no obstructions between the remote control and the unit • Make sure the remote control is pointing at the unit • Make sure the batteries are inserted or the polarity is correct. • Make sure the batteries are not weak. • Replace the weak battery.

Other Notes:

 Static or other external interfere may cause the player to behave abnormally. In this occurs, unplug the power-supply cord from the outlet and plug it in again to reset the player. If the problems persist, then please disconnect the power and consult a qualified technician

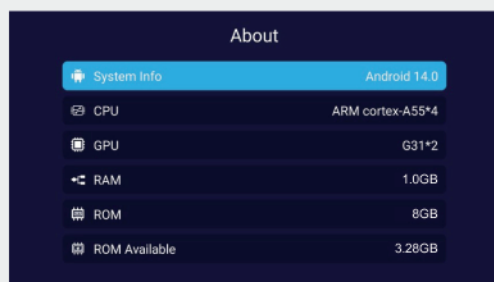



HITECH
POWER SOLUTIONS



(03) 9123 8442



info@hitechpowersolutions.com.au



www.hitechpowersolutions.com.au