



Model:3J-WPT-01

EN >>

# Contents

---

## Subject

|                               |    |
|-------------------------------|----|
| Main components -----         | 02 |
| Security considerations ----- | 03 |
| Product size -----            | 04 |
| Packing List -----            | 05 |

## Installation

|                            |    |
|----------------------------|----|
| Product Installation ----- | 07 |
| Product usage -----        | 10 |


## Others

|                               |    |
|-------------------------------|----|
| Technical specification ----- | 13 |
| Warranty regulations -----    | 14 |
| Warranty card -----           | 15 |

# Main components

---

## Waterless Toilet

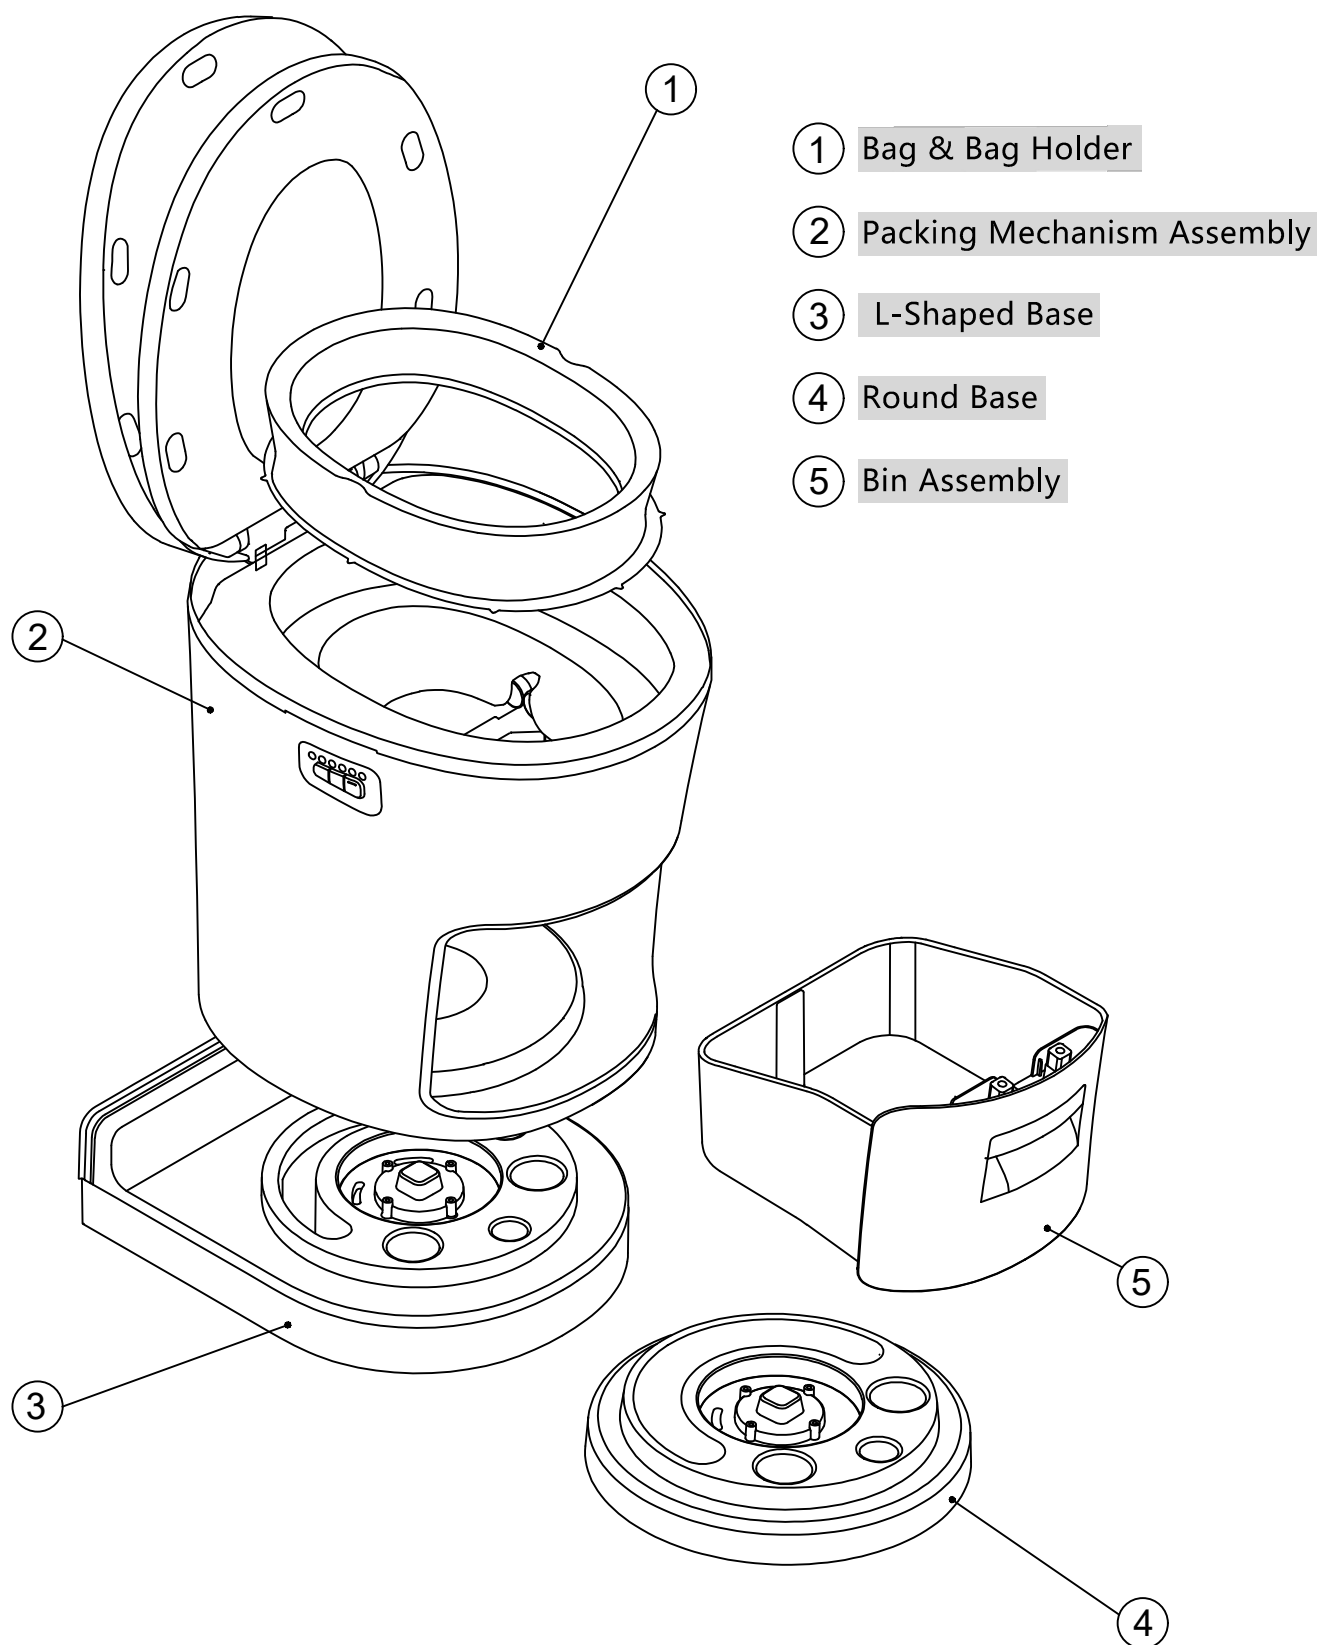

# Security considerations

Please read this manual carefully before installation, and first use ,and store it in a safe place.If you pass on the product to another person ,hand over this instruction manual along with it.

In order to avoid property damage to users and others, please strictly follow the safety warnings and precautions.

## ○ Symbols and meanings

|                                                                                   |                                                          |
|-----------------------------------------------------------------------------------|----------------------------------------------------------|
|  | Warning! Risk of causing serious injury or damage.       |
|  | Attention! Not follow instruction will lead to damage.   |
|  | This symbol indicates that this operation is prohibited. |
|  | This symbol indicates related information.               |



## Warning!

1. The operating voltage range for the waterless toilet is 9–16V DC. If the voltage exceeds 18V the machine will activate its protective mechanism and cease operation. Additionally please note that the power supply and the cable must provide a current of at least 18A to ensure proper packaging. If a fuse is required it must be rated at  $\geq 20A$ .
2. A lighted cigarette or other incendiary object must not be put into the toilet .
3. Do not pour in liquids above 40 degrees Celisus.
4. For long-term nonuse: Remove battery and disconnect power to prevent battery failure.
5. Do not wash the interior of the main unit with water or detergent. Doing so may cause Short-circuit problem.A soft cloth is recommended for cleaning.




## Caution


1. The seat and cover of this product have the function of slow down . Do not press hard to avoid damaging the decelerator .
2. When using this product , do not lean back on the cover to avoid damaging the product .
3. Do not put other rubbish in the drawer,otherwise it will affect the packing effect .
4. This product should be used by persons (including children) with physical , sensory , intellectual impairment or lack of experience and common sense under special supervision. Do not let children play with this product.
5. When it thunders , it is strongly recommended to disconnect power supply .
6. Do not lay on side or upside the product during the electrical circuit ,to avoid fire or burning.
7. Do not use lacquer thinner , petrol , liquid medicine , detergent , insecticide , toilet cleanser and scrubbing brush to clean the product .

# Product size

L-Shaped Base  
units: mm

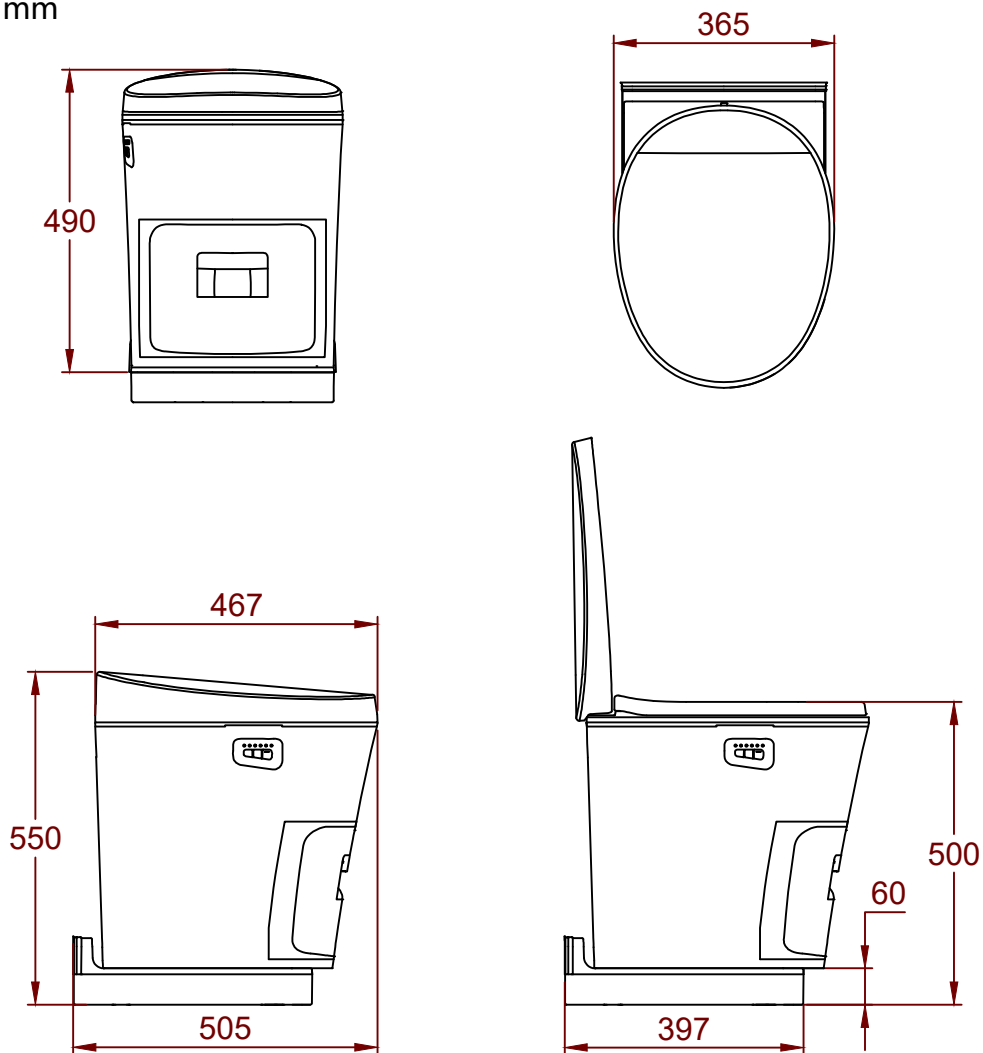


Round Base  
Units: mm

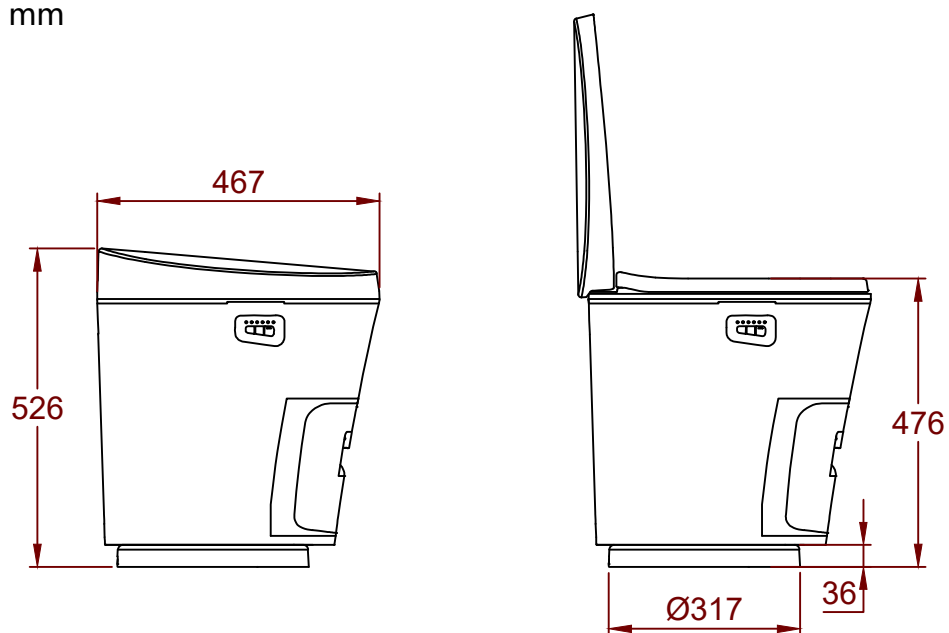


# Packing list


---

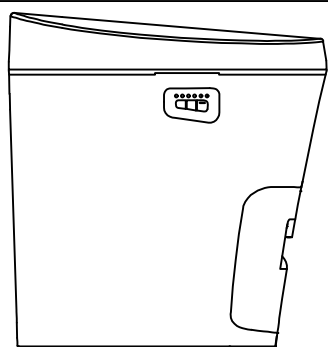


Waterless Toilet




Insert Strip for Bag

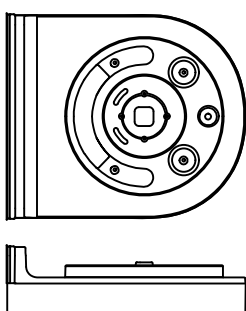


L-Shaped Base (Opiton)

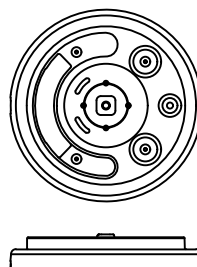


Round Base (Opiton)

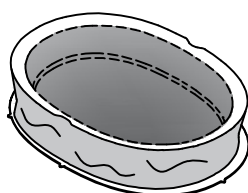


Bag & Bag Holder

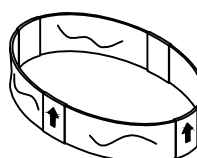

Spare Bag

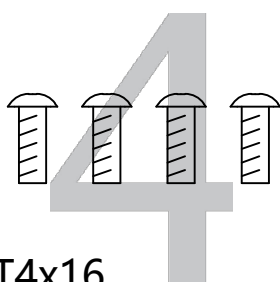

ST4x16  
Self-tapping screws  
(For Toilet)

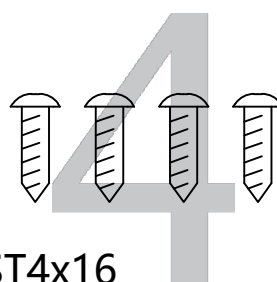

ST4x16  
Self-tapping screws  
(For Base)

# Packing list

---



Solidifying agent  
(30Pcs)




# Product Installation


The toilet is compatible with two power supply modes: 12V DC (not less than 20A), & Removable lithium battery.

1. Remove the three wire clips at the bottom of the toilet, pass the wires (brown positive, blue negative, 12V DC) through the base, connect them to the power supply, and tidy up the connection lines. Ensure there is sufficient length left to avoid affecting the normal rotation of the toilet.

( installation of the toilet with Round base is similar to that of the toilet with L-Shaped Base )

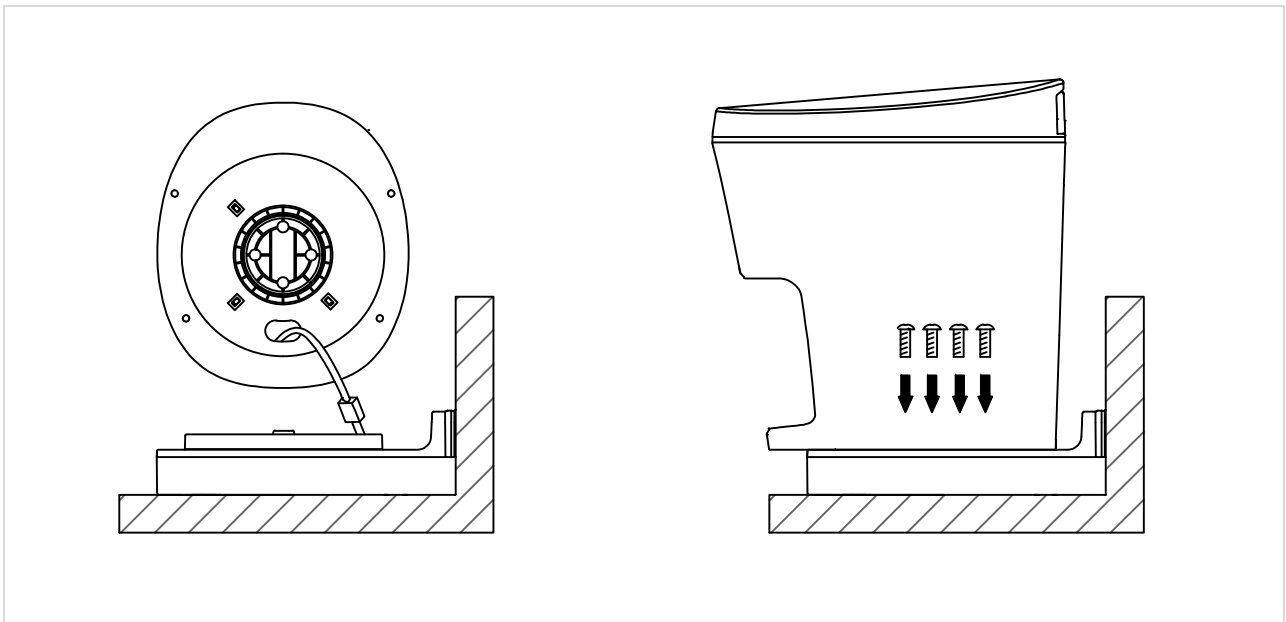


2. Use ST4x16 self-tapping screws to fix the base onto the floor.

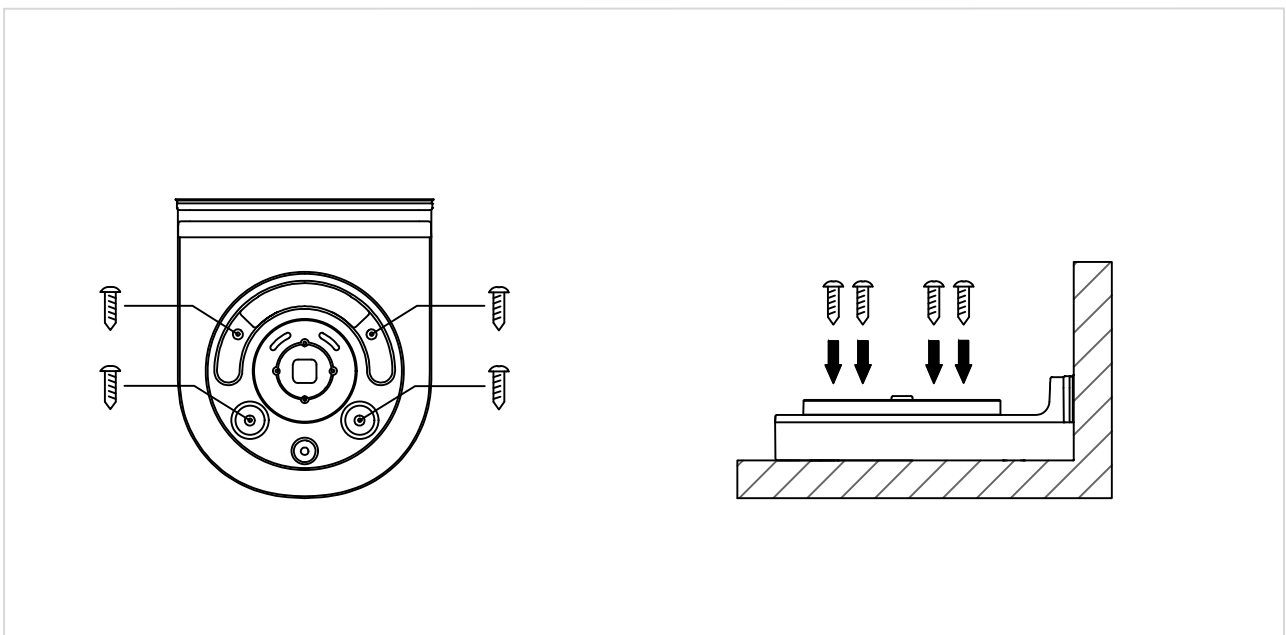


# Product Installation

3. Remove the bin align the toilet with the base and fix the toilet with ST4 x16 self-tapping screws.

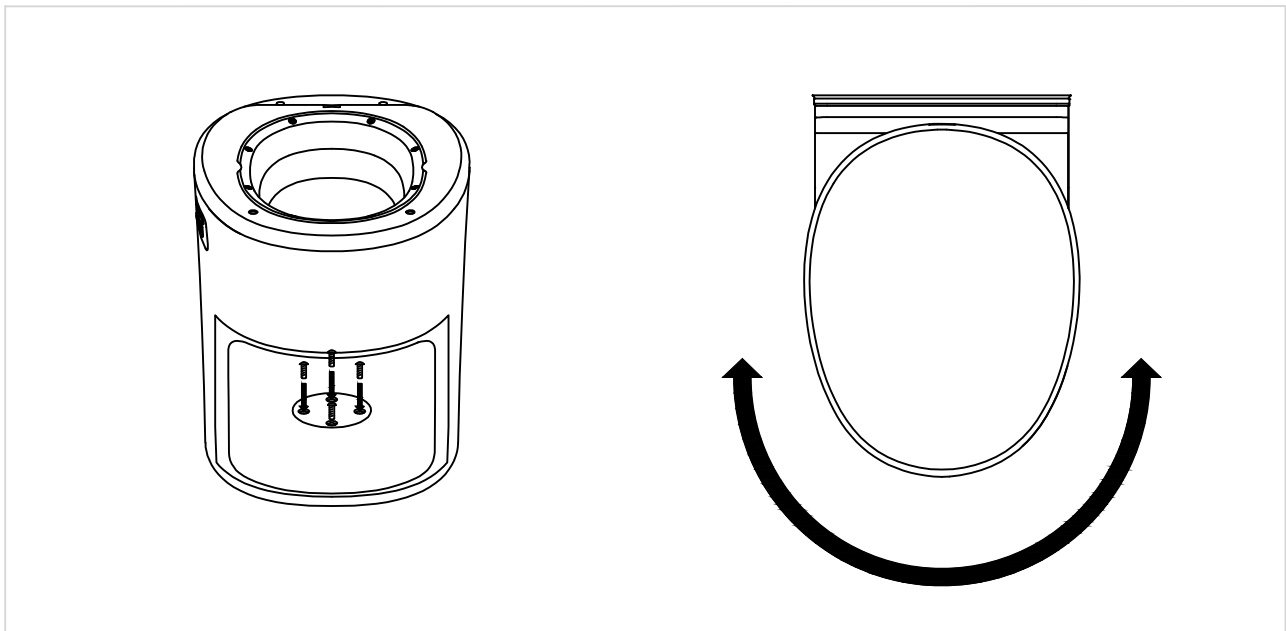

**Make sure the cable is long enough**

4. Install the battery in the direction indicated by the arrow. Put the bin back into the toilet and check function properly. (If a 12V DC power supply is connected, it can still work properly without battery.)

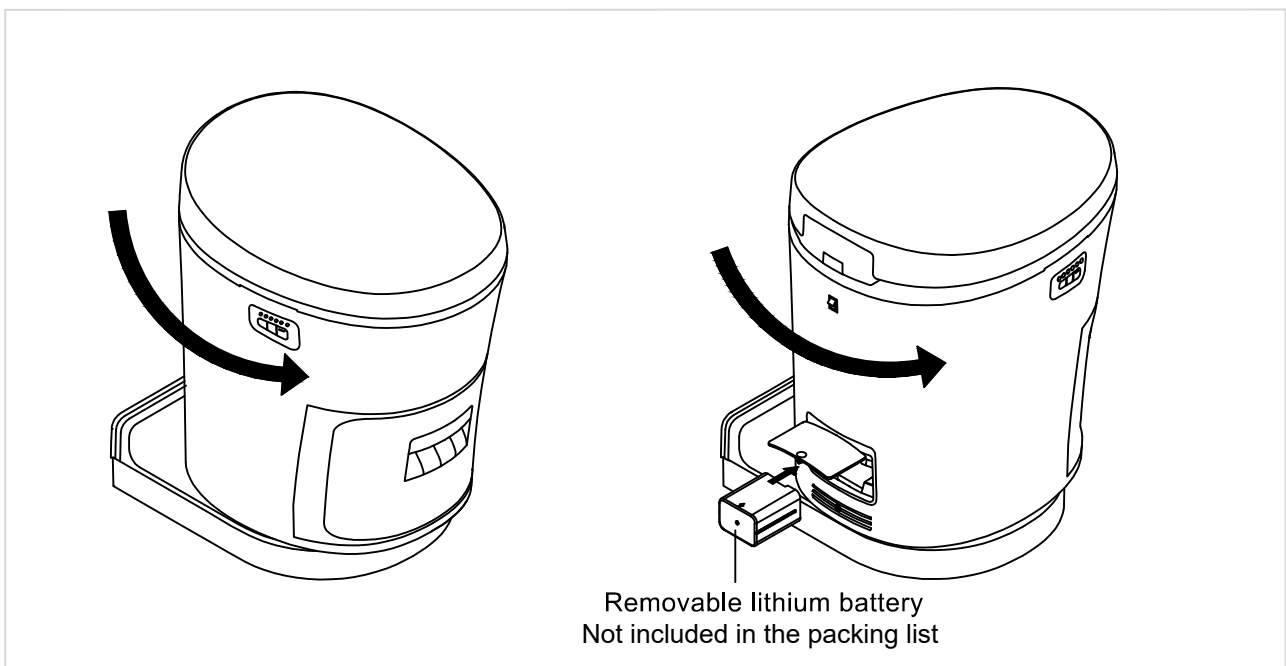


**The operating voltage of the toilet: 9 ~16V DC. If the voltage exceeds 18V, the toilet will stop working. Additionally, the power supply must be no less than 18A. If an fuse is required must be  $\geq 20A$ .**


# Product Installation

5. To remove the lid: Lift it to about 75 degrees, press the release button, and pull backward.

To install the lid: Insert into the slots and push in until it clicks into place.

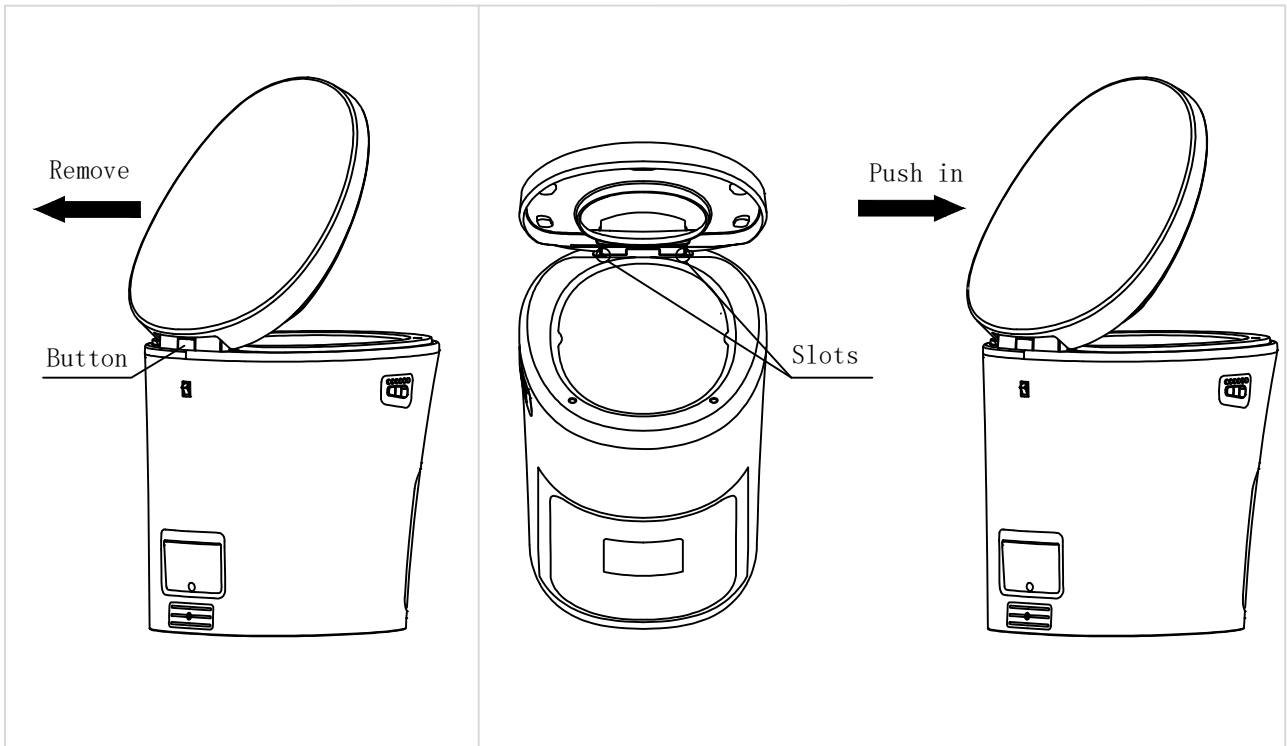


6. If the base is not selected, directly connect the cable (brown positive, blue negative, 12V DC) to a 12V DC power supply (not less than 20A), then skip steps 2 and 3 and continue with the installation.

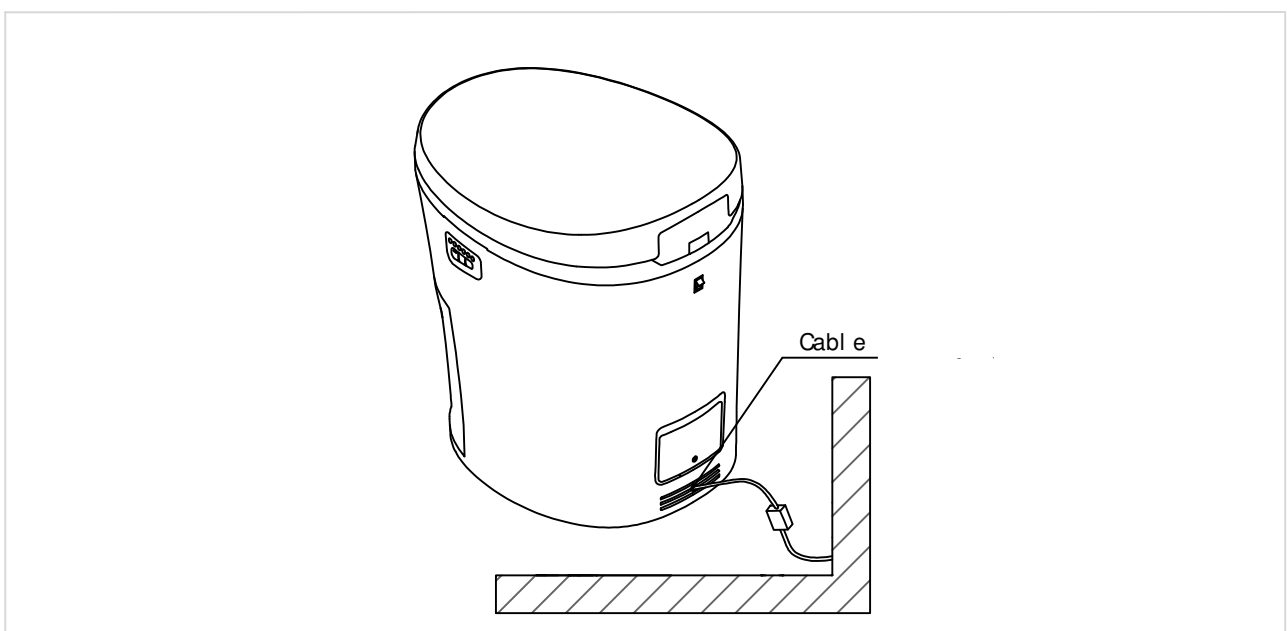


# Product usage

1. Pull out a portion of the bag and wrap it around the bag holder. Secure the bag onto the roller with plastic insert strip then close the lid. Turn on the power switch, press and hold the "  " button for 2 seconds to sealing the bag first time before use.

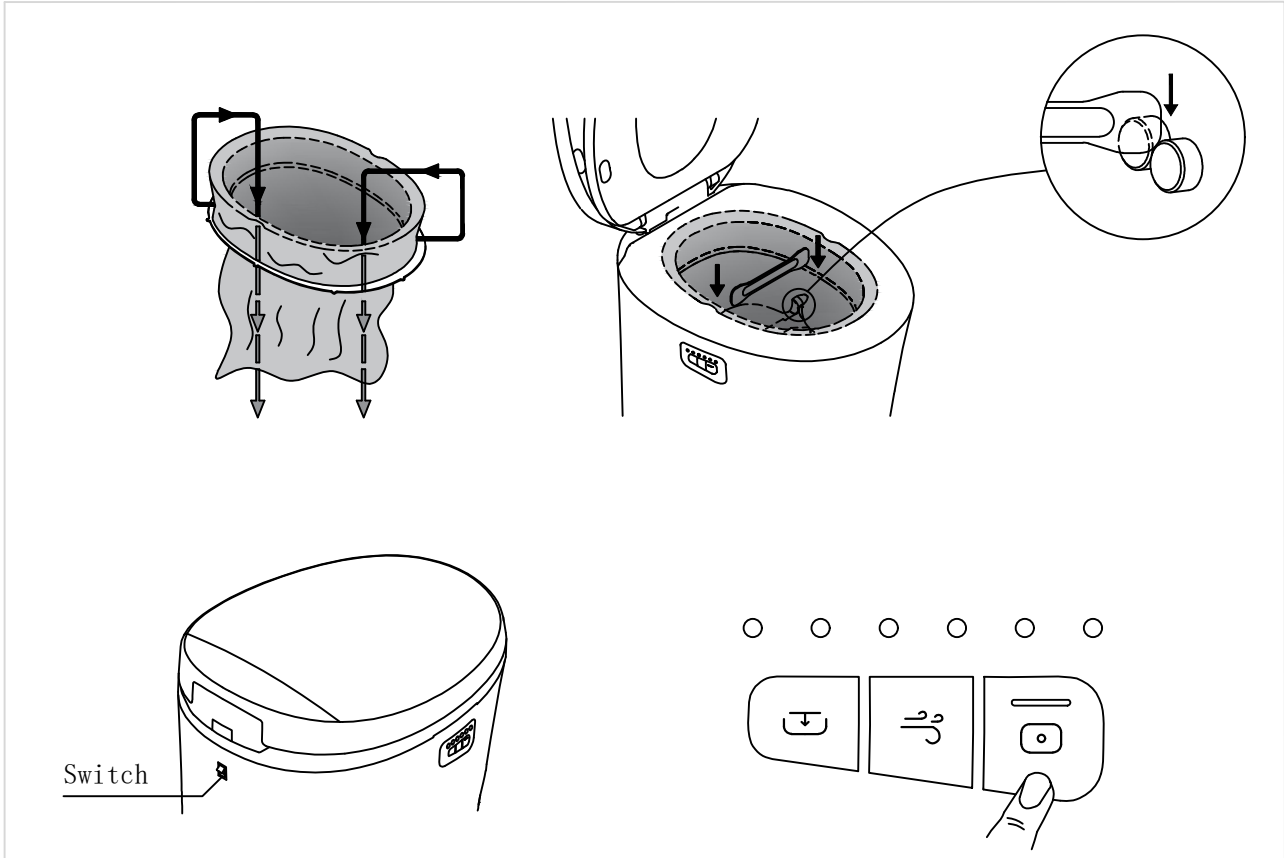

2. Before each use of the toilet, drop in a solidifying agent. It can make liquids solidify.

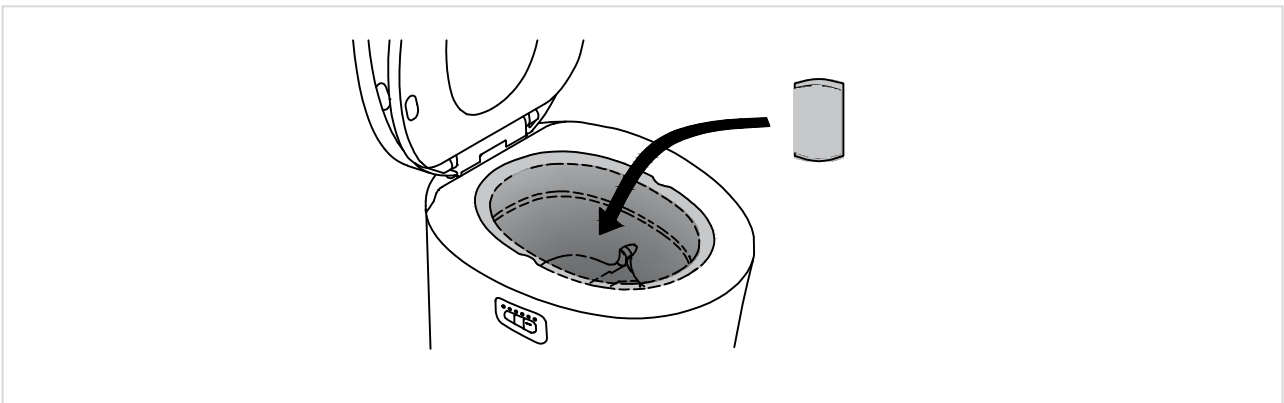


3. Press and hold "  " for 2 seconds, and the toilet will automatically initiate the packing process. The six indicator lights will illuminate sequentially (approximately 130 seconds), followed by a buzzer sound, indicating that packing is complete.




The sealing process can only be performed after the toilet lid is closed.

# Product usage


4. After six consecutive packing cycles, the toilet will emit a buzzer sound to indicate that the bin needs to be cleaned otherwise it may affect normal operation. The packing count will be reset after cleaning.

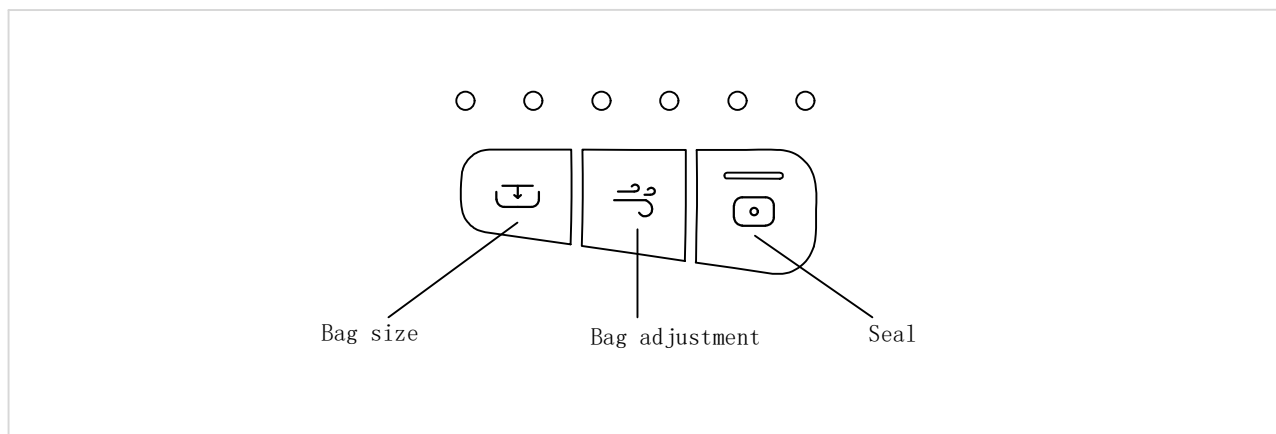

5. Press and hold the "  " button to rotate the roller and adjust the depth of the bag. Release the button to stop.

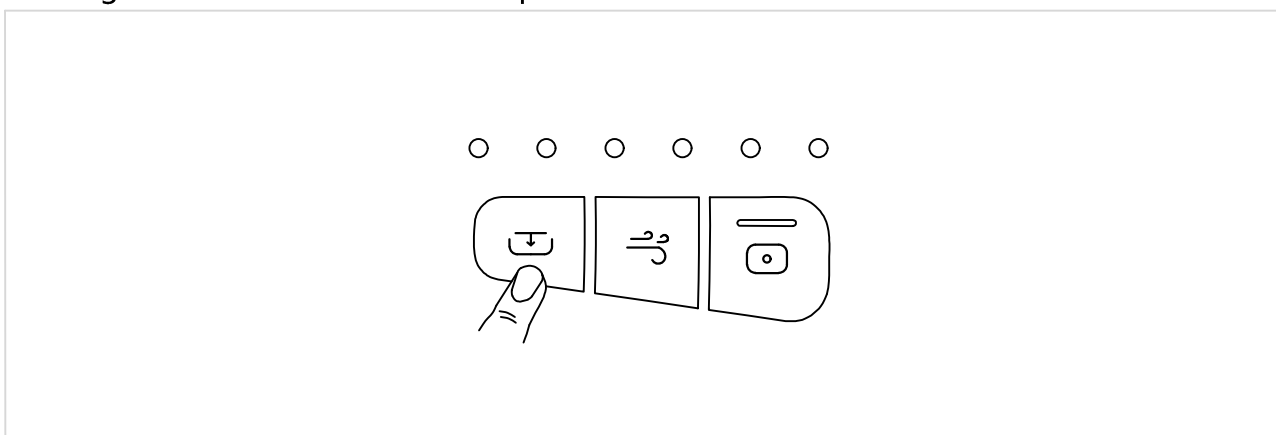

6. Press and hold the "  " button to use suction to adhere the bag to the inner wall of the toilet. Release the button to stop.

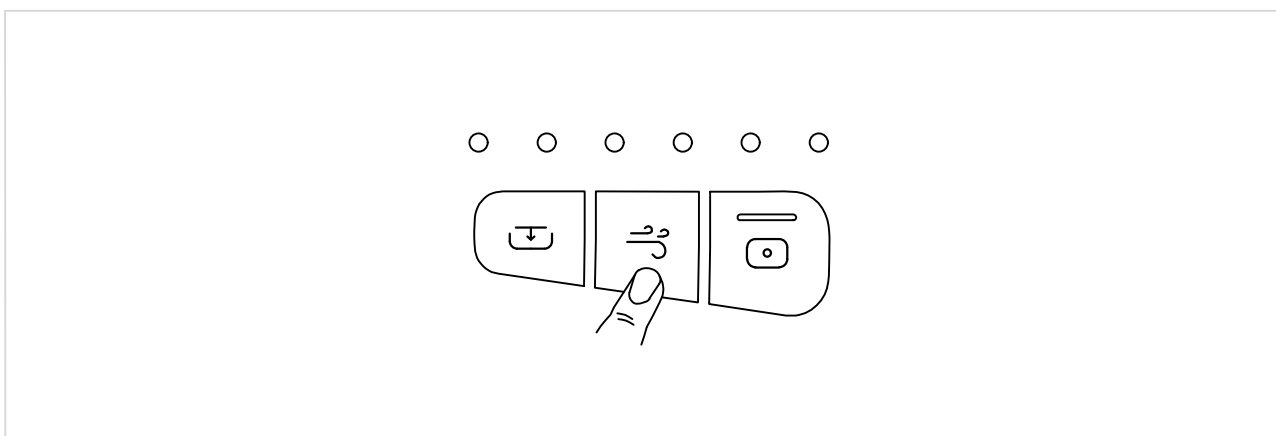


# Product usage

7. Replace the bag: Separate the two shells of the bag holder. Slip the new roll onto it, then remove the arrow-marked tab. Pull out a portion of the bag and wrap it around the inner ring. Secure the bag into the roller with the plastic insert strip, close the lid, and execute the sealing operation.



Ensure the pointed end of the bag holder is pointing down.

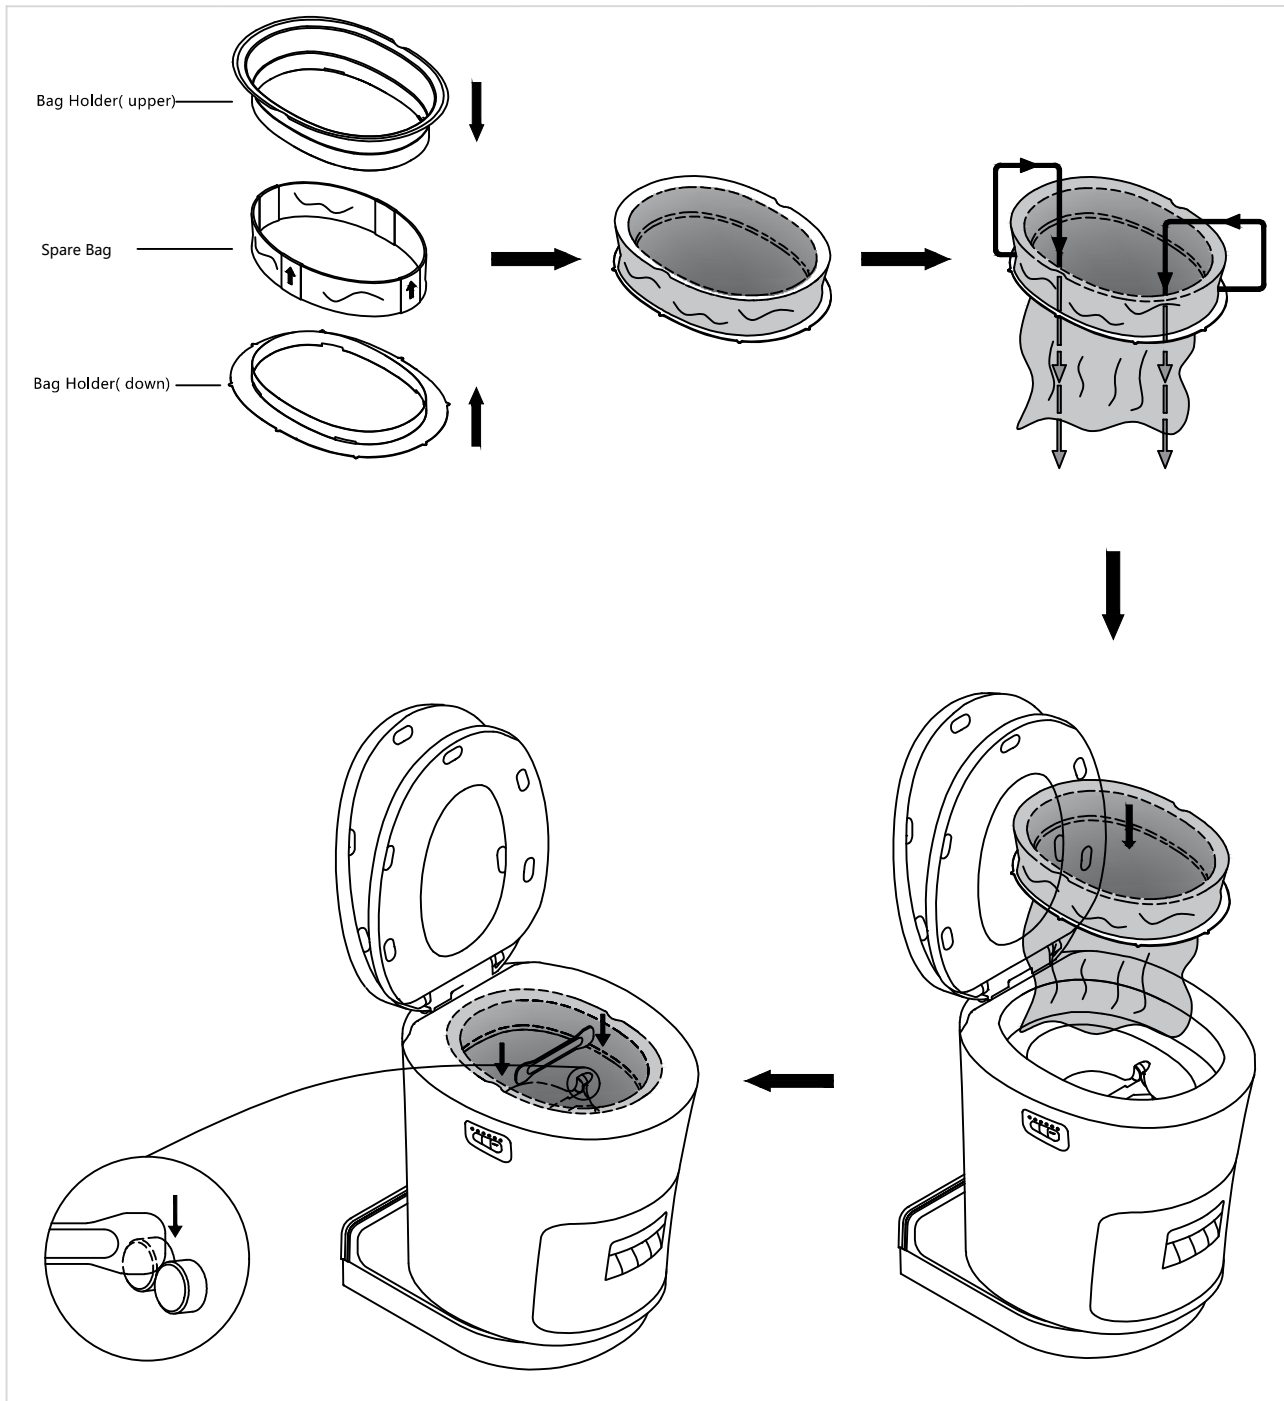

For long-term nonuse: Remove battery and disconnect power to prevent battery failure.

# Technical specification

## 1. Technical specification

|                          |                          |                                   |                       |
|--------------------------|--------------------------|-----------------------------------|-----------------------|
| Product name             | Waterless Toilet         | Nominal voltage                   | 12V                   |
| Product model            | 3J-WPT-01                | Supply voltage                    | 9-16V                 |
| Power (max.)             | 160W                     | Power consumption in standby mode | 0.35W                 |
| Current (max.)           | 18A                      | Power supply                      | 12v DC or Battery     |
| Dimensions Toilet        | 490x365x467mm            | Toilet weight                     | 8.6kg                 |
| Dimensions L-Shaped Base | 397x337x112mm            | L-Shped Base weight               | 1.2kg                 |
| Dimensions Round Base    | ø317x61mm                | Round Base weight                 | 0.6kg                 |
| Sitting height           | 500mm<br>(L-Shaped Base) | Sitting height                    | 476mm<br>(Round Base) |

## 2. Specialized Battery Specifications(Not included in the packing list)

|              |                                              |               |            |
|--------------|----------------------------------------------|---------------|------------|
| Product name | Rechargeable Li-ion battery                  | Battery model | HSS092-03A |
| Product size | 85X70X50mm                                   | Capacity      | 5200mAh    |
| 8Pin output  | 12V-10A                                      |               |            |
| Type-C       | Input: 5V/3A、9V/3A、12V/2.5A、15V/2A、20V/1.5A  |               |            |
|              | Output: 5V/3A、9V/3A、12V/2.5A、15V/2A、20V/1.5A |               |            |

## 3. Other

|                       |                                       |                    |                         |
|-----------------------|---------------------------------------|--------------------|-------------------------|
| Bag usage per liner   | 50(average)                           | Sealing time       | 130±5s                  |
| Fully charged battery | 65(Sealing processes)                 | Lifetime PTFE band | 1500(Sealing processes) |
| Operating temperature | -10~50℃                               | Bin Capacitiy      | Six packages (6L max.)  |
| Protection class      | IPX4                                  | Materials          | PP/PA/ABS Etc.          |
| Certification         | ECE R10、CE (EN 50498) 、ROHS 、WEEE、FCC |                    |                         |



Recharge when only one battery bar remains to ensure sealing performance.

# Warranty regulations

---

- 1.This product is guaranteed free of charge for one year.
- 2.During the warranty period, the fault caused by normal use in accordance with the instructions (determined by the official staff of the company) will be repaired free of charge.
- 3.During the warranty period, in case of any of the following circumstances, a charge repair and lifetime service will be implemented:
  - 1) Unable to provide this warranty card and valid purchase certificate.
  - 2) Invoice alteration.
  - 3) Failure and damage caused by unexpected factors and improper use.
  - 4) Failure damage caused by self-repair without permission of our company.
  - 5) Damage caused by using power supply and voltage other than specified.
  - 6) Products that continue to be used after the expiry of three guarantees after repair.
- 4.Only the above warranties are made without any other warranties, express or implied, including the implied warranties of merchantability, rationality and adaptability for a particular application). The company shall not be liable for any special, incidental or indirect damages, whether in contract, in civil negligence or otherwise.
- 5.The period of validity of the three guarantees is calculated from the date of invoice, excluding the time occupied by repair and waiting for repair without spare parts. During this period, the consumer shall handle the repair, return and replacement with the invoice and Three Guarantees certificate.
- 6.The consumer can choose to return, exchange or repair the product in case of performance failure within 7 days from the date of sale.
- 7.If the product fails within 15 days from the date of sale, the consumer can choose to replace or repair it.

After-sales service:



# Warranty card

---

Product name : \_\_\_\_\_  
Product model : \_\_\_\_\_  
Serial number : \_\_\_\_\_  
Date of manufacture : \_\_\_\_\_  
Customer name : \_\_\_\_\_ Contact number : \_\_\_\_\_  
Customer address : \_\_\_\_\_

---

Warranty content : \_\_\_\_\_  
After sales : \_\_\_\_\_  
Customer signature : \_\_\_\_\_ ☐ Satisfied ☐ Dissatisfied

---

Warranty content : \_\_\_\_\_  
After sales : \_\_\_\_\_  
Customer signature : \_\_\_\_\_ ☐ Satisfied ☐ Dissatisfied

---

Warranty content : \_\_\_\_\_  
After sales : \_\_\_\_\_  
Customer signature : \_\_\_\_\_ ☐ Satisfied ☐ Dissatisfied